


# Engine Will Not Start


## Starter Motor Operates But Engine Does Not Start

Check the following items:

- Make sure engine stop switch is RUN  position [P. 44](#)
- Check the correct engine starting sequence [P. 46](#)
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
  - ▶ If the indicator light is on, contact your dealer as soon as possible.

## Starter Motor Does Not Operate

Check the following items:

- Make sure engine stop switch is RUN  position [P. 44](#)
- Check for a blown fuse [P. 123](#)
- Check for a loose battery connection or battery terminal corrosion [P. 74](#)
- Check the condition of the battery [P. 118](#)

If the problem continues, have your motorcycle inspected by your dealer.