

## Display Setting

### Setting Mode A

Following items to change sequentially ( P28)

- Clock setting
- Backlight brightness adjustment
- Activating/deactivating of tripmeter A, average fuel mileage and fuel consumption automatic reset mode
- Changing of speed and mileage unit
- Changing of coolant temperature gauge unit

### Setting Mode B

Following items to change sequentially ( P32)

- Setting of REV indicators  
(blinking RPM setting, interval RPM setting and REV indicators brightness adjustment)
- Setting display mode of tachometer