



Starter Motor Operates But Engine Does Not Start

Check the following items:

- Make sure engine stop switch is RUN  position 2 P. 44
- Check the correct engine starting sequence 2 P. 46
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
 - u If the indicator light is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Make sure engine stop switch is in RUN  position 2 P. 44
- Check for a blown fuse 2 P. 123
- Check for a loose battery connection or battery terminal corrosion 2 P. 60, 70
- Check the condition of the battery 2 P. 118

If the problem continues, have your motorcycle inspected by your dealer.