

Instruments

Street mode


Clock (12-hour display)

To set the clock: ➡ P.70

Tachometer

NOTICE

Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

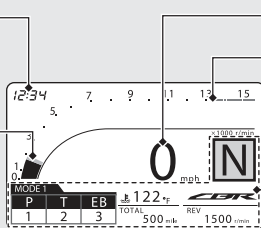

Speedometer

Tachometer red zone

(excessive engine rpm range)

Display Check

When the ignition switch is turned to the ON position, the opening symbol will show on the display. If the display itself does not show when it should, have your dealer check for problems.

You can select the street mode or circuit mode display.

To change the circuit mode: ➡ P.24