

Instruments *(Continued)*

When selecting the "km/h"

- Units of the speedometer and average speed show "km/h".
- Units of the odometer, tripmeter A/B and available driving distance show "km".
- Units of the current fuel mileage and average fuel mileage show "L/100km" or "km/L".
- Units of the tripmeter A fuel consumption and amount of remaining fuel show "L".

Temperature Unit [TEMP.]

- 1 Select the "°F" or "°C" using the **[SEL]** **[▲]** (up) or **[SEL]** **[▼]** (down) button.
- 2 Press the **[MODE]** button. The temperature unit setting is set, and then the display returns to the upper level hierarchy.

