

### **P value (Engine output level)**

P value has five setting levels.

Available setting range: 1 to 5

- u Level 1 has the most power.
- u Level 5 has the least power.

### **T value (Torque control level)**

T value has ten setting levels.

Available setting range: 0 to 9

- u Level 1 is the minimum Torque Control level
- u Level 9 is the maximum Torque Control level.
- u Level 0 deactivates the Torque Control.

### **EB value (Engine brake level)**

EB value has three setting levels.

Available setting range: 1 to 3

- u Level 1 has the strongest engine braking effect.
- u Level 3 has the weakest engine braking effect.

### **S mode (Suspension mode)**

**CBR1000S1**

S mode has six modes.

Available modes: A1, A2, A3, M1, M2 and M3

### **Adjusting the ÖHLINS Smart EC system**

**➔ P.170**