


Front Spring Preload

You can adjust the spring preload by the adjuster to suit the load or the road surface.



1. Make sure the ignition switch is in the OFF position. 2 P. 99
2. Slide the connector cover, and then disconnect the front suspension connector from the coupler clip.
3. Disconnect the front suspension connector.
 - u Do not remove by pulling on the wire harness.

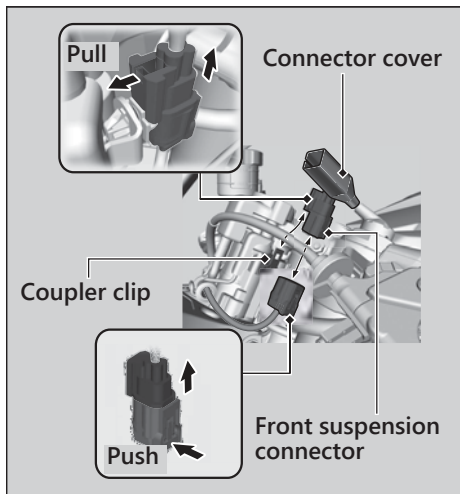