

Blown Fuse

Before handling fuses, see "Inspecting and Replacing Fuses." 2 P. 129

■ Fuse Box Fuses

1. Remove the front seat. 2 P. 139
2. Remove the fuse box cover.
3. Pull the fuses out one by one with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
4. Reinstall the fuse box cover.
5. Reinstall the front seat.

