

Tires

Air Pressure	133
Puncture.....	184
Replacing.....	135, 184
Torque Control Indicator	93
Torque Control OFF Indicator	93
Transporting Your Motorcycle	208
Tripmeter	29, 201
Troubleshooting	178
Turn Signal Switch	98

U

Units	71
User Letter	41, 64

V

Vehicle Identification Number	210
--	-----

W

Warranty Coverage and Service	218
Washing Your Motorcycle	203
Weight Limit	17

Wheels

Front Removal.....	185
--------------------	-----

Rear Removal.....	190
-------------------	-----