












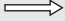


FUNCTION

To Set the FUNCTION Menu

- 1 Select the "FUNCTION" menu on the main menu screen.  P.43
- 2 Select a menu by pressing the   (up) or   (down) button and press the  button.

To end the setting

Select the  (return) on the menu screen. The display returns to the "FUNCTION" menu on the main menu screen.

-  Press the  button
-  Press the   (up) button
-  Press the   (down) button

"FUNCTION" is selected

