

- 12 Press the **MODE** button. The cursor moves to the indication of minute.
- 13 Press the **SEL** **▲** (up) or **SEL** **▼** (down) button until the desired minute is displayed.
- 14 Press the **MODE** button. The date and clock setting is set, and then the display returns to the upper level hierarchy.

Press and hold the **SEL** **▲** (up) or **SEL** **▼** (down) button to move the menu quickly.

UNITS

You can change the speed and mileage, temperature, and fuel mileage meter units.

To set each unit

- 1 Select the "SPEED", "TEMP." or "FUEL CONS." using the **SEL** **▲** (up) or **SEL** **▼** (down) button.
- 2 Press the **MODE** button. The display moves to each unit setting screen.

The units of the speedometer, odometer, tripmeter A/B, current fuel mileage, average fuel mileage, tripmeter A fuel consumption, average speed, available riding distance and amount of remaining fuel are changed in "SPEED" menu.