

Troubleshooting

Engine Will Not Start	P. 179	Burned-out Light Bulb	P. 194
Overheating (High coolant temperature indicator is on)	P. 180	Blown Fuse.....	P. 197
Warning Indicators On or Flashing	P. 181		
Low Oil Pressure Indicator	P. 181		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL).....	P. 181		
ABS (Anti-lock Brake System) Indicator	P. 182		
HESD (Honda Electronic Steering Damper)			
Indicator	P. 182		
Torque Control Indicator.....	P. 183		
Tire Puncture	P. 184		
Electrical Trouble	P. 193		
Battery Goes Dead.....	P. 193		