

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 85	Burned-out Light Bulb.....	P. 96
<b>Overheating (Segment H flashes in coolant temperature gauge)</b> .....	P. 86	Blown Fuse.....	P. 100
<b>Warning Indicators On or Flashing</b> .....	P. 87		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL).....	P. 87		
ABS (Anti-lock Brake System) Indicator .....	P. 87		
<b>Other Warning Indications</b> .....	P. 88		
Fuel Gauge Failure Indication .....	P. 88		
Coolant Temperature Gauge Failure			
Indication.....	P. 88		
<b>Tire Puncture</b> .....	P. 89		
<b>Electrical Trouble</b> .....	P. 96		
Battery Goes Dead .....	P. 96		