


## Headlight Bulb

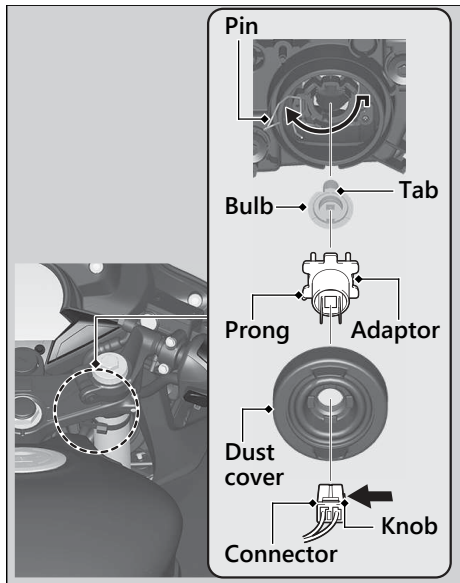

The right and left headlight bulbs replacement can be done in the same way.

1. Pull off the connector while pushing the knob.
2. Remove the dust cover.
3. Press the pin down and pull out the bulb assembly without turning it.
4. Carefully pull out the bulb from the adaptor.
5. Install a new bulb and parts in the reverse order of removal.
  - ▶ Assemble the bulb and adaptor with the bulb tab upward and the adaptor prong left downward.

Do not touch the glass surface with your fingers. If you touch the bulb with your bare hands, clean it with a cloth moistened with isopropyl (rubbing) alcohol.