


### 3 To activate/deactivate of tripmeter A, average fuel mileage and fuel consumption automatic reset mode:

You can activate or deactivate the automatic reset mode by refuelling after 1st (E) segment of the fuel gauge starts flashing. Deactivation is initially set.

- 1 Press **SEL** button to select "On" (activate) or "OFF" (deactivate) in the automatic reset mode.

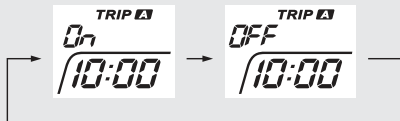

- 2 To end the selection, press **SET** button. The activation/deactivation of automatic reset mode is set, and then the display moves to the changing of the speed and mileage unit.