



Maintenance Schedule

Items	Frequency *1									Regular Replace	Refer to page
	× 1,000 mi	0.6	4	8	12	16	20	24			
	× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4			
Fuel Line				I		I		I			-
Throttle Operation				I		I		I			83
Air Cleaner *2						R		R			69
Crankcase Breather *3			C	C	C	C	C	C			84
Spark Plug						R					-
Valve Clearance						I					-
Engine Oil		R		R		R		R	1 Year		67
Engine Oil Filter		R				R					67
Engine Idle Speed				I		I		I			-
Radiator Coolant *5				I		I		I	3 Years		70
Cooling System				I		I		I			-
Secondary Air Supply System						I					-
Evaporative Emission Control System *4						I					-

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 124).
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- C** : Clean
- L** : Lubricate
- R** : Replace