 


### Fuel gauge

Remaining fuel when only  
1st (E) segment starts flashing:  
approximately 1.00 US gal  
(3.8 liters)



**If the fuel gauge indicators repeat  
flashing or turned off: ( P84)**

### Display Check

When the ignition switch is turned on, all the mode and digital segments will show. If any part of these displays does not come on when it should, have your dealer check for problems.