

Parts Location

Rear brake fluid reservoir → P.62

Fuse box → P.98

Battery → P.50

Main fuse → P.100

Front brake fluid reservoir → P.62

Front brake lever → P.74

Throttle grip → P.73

Engine oil fill cap → P.57

Engine oil filter → P.58

Coolant reserve tank → P.60

Engine oil drain bolt → P.58

Right lower cowl → P.53

Engine oil level inspection window → P.56

