
Switches

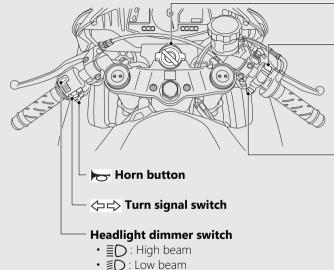

Engine stop switch

Should normally remain in the \bigcirc (Run) position.

► In an emergency, switch to the

(Stop) position to stop the engine.

- ③ Start button

Headlight turns off when operating the starter motor.