
















































Items		Frequency *1								Refer to page	
		× 1,000 mi	0.6	4	8	12	16	20	24		
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Emission-related Items	Fuel Line									-	
	Throttle Operation									73	
	Air Cleaner *2									-	
	Spark Plug		Every 16,000 mi (25,600 km):  Every 32,000 mi (51,200 km): 								-
	Valve Clearance									-	
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month:  Regular = Every 8,000 mi (12,800 km) or 12 months: 								58
	Engine Oil Filter										58
	Engine Idle Speed										-
	Radiator Coolant *4									60	
	Cooling System									-	
	Secondary Air Supply System									-	
	Evaporative Emission Control System *3									-	
Exhaust Gas Control Actuator Cable		Every 16,000 mi (25,600 km): 								-	

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 119).
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

-  : Inspect (clean, adjust, lubricate, or replace, if necessary)
-  : Replace
-  : Lubricate