


Blown Fuse


Before handling fuses, see "Inspecting and Replacing Fuses." ▶ P. 42

Fuse Box Fuses

CBR600RR

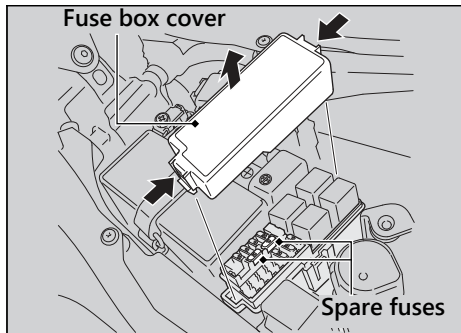

CBR600RA

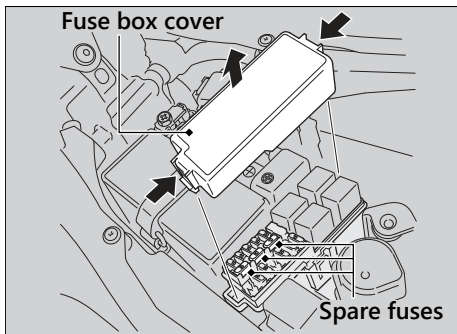

1. Remove the front seat. ▶ P. 52
2. Remove the fuse box cover.