












Items		Frequency *1								Refer to page	
		× 1,000 mi	0.6	4	8	12	16	20	24		
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Emission-related Items	Fuel Line					I		I		I	–
	Throttle Operation					I		I		I	74
	Air Cleaner *2						I			I	–
	Spark Plug		Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R								–
	Valve Clearance							I			–
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R								59
	Engine Oil Filter			R		R		R		R	59
	Engine Idle Speed			I		I		I		I	–
	Radiator Coolant *4					I		I		R	61
	Cooling System					I		I		I	–
	Secondary Air Supply System					I		I		I	–
	Evaporative Emission Control System *3						I			I	–
Exhaust Gas Control Actuator Cable		Every 16,000 mi (25,600 km): I								–	

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 120).
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R** : Replace
- L** : Lubricate