


## Blown Fuse


Before handling fuses, see "Inspecting and Replacing Fuses." ▣ P. 43

### Fuse Box Fuses

CBR600RR

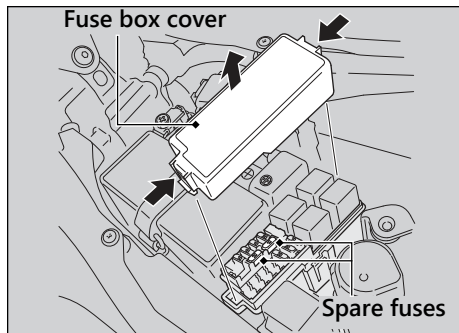

CBR600RA

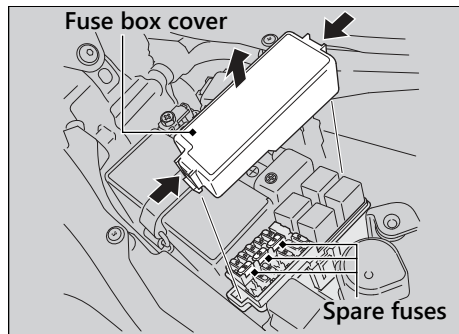

1. Remove the front seat. ▣ P. 53
2. Remove the fuse box cover.