
Switches

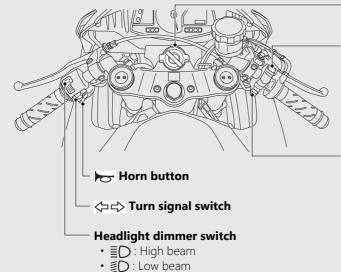

Engine stop switch

Should normally remain in the (Run) position.

▶ In an emergency, switch to the 🂢 (Stop) position to stop the engine.

Start button

Headlight turns off when operating the starter motor.