

■ Removal

1. Remove the bolts A, bolt B, bolt C, bolt D, collar and clips. ► P. 52
2. Remove the right lower cowl.

■ Installation

Install the parts in the reverse order of removal.