## Tire Puncture ► Removing Wheels

- **5.** Remove the rear axle shaft, chain adjusting plates, brake caliper bracket, rear wheel and side collars.
  - Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
  - Avoid getting grease, oil, or dirt on the disc to pad surfaces.
  - ➤ Do not push the brake pedal while the wheel is removed.

## Installation

- 1. Attach the right and left side collars in their original locations on the rear wheel.
- **2.** To install the rear wheel, reverse the removal procedure.
  - Take care to prevent the brake caliper from scratching the wheel during installation.

## NOTICE

When installing a wheel or caliper into original position, carefully fit the brake disc between the pads to avoid scratching them.

**3.** Make sure that the lug on the swingarm is positioned in the slot on the brake caliper bracket.

