


Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. **2 P. 33**
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - u If the indicator lamp is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. **2 P. 33**
- Make sure engine stop switch is in the  (Run) position. **2 P. 30**
- Check for a blown fuse. **2 P. 108**
- Check for a loose battery connection (**2 P. 62**) or battery terminal corrosion (**2 P. 51**).
- Check the condition of the battery. **2 P. 105**

If the problem continues, have your motorcycle inspected by your dealer.