

| Odometer [TOTAL]

Total distance ridden. When "-----" is displayed, go to your dealer for service.

| Tripmeter [TRIP A/B]

Distance ridden since tripmeter was reset. When "---.-" is displayed, go to your dealer for service.

To reset the tripmeter: ➡ P.27

| Average fuel mileage [AVG A/B]

The average fuel mileage A will be based on tripmeter A. Displays the average fuel mileage A since tripmeter A was reset. The average fuel mileage B will be based on tripmeter B. Displays the average fuel mileage B since tripmeter B was reset. Display range: 0.0 to 299.9 mile/gal (L/100km or km/L)

- Initial display: "---.-" is displayed.
- When the tripmeter A or B is reset: "---.-" is displayed.
- More than 299.9 mile/gal (L/100km or km/L) : "299.9" is displayed.

When "---.-" is displayed except for the above-mentioned cases, go to your dealer for service.

To reset the average fuel mileage:

➡ P.27