


Instruments *(Continued)*

To reset the tripmeter B and average fuel mileage B together, press and hold the SET button while the tripmeter B or average fuel mileage B is displayed.

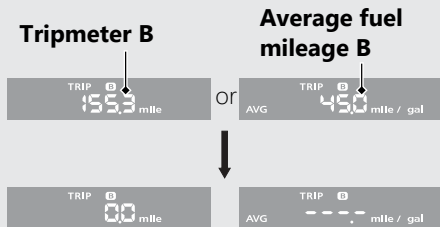

When they are reset, reset display appears at each indication. Then, the display returns to the last selected indication.

