



Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

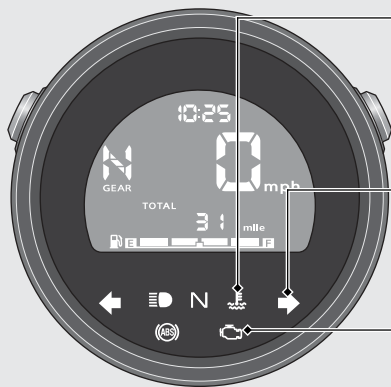


 **High coolant temperature indicator**

If it comes on while riding: 

 **Right turn signal indicator**

 **PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned to the ON position with the engine stop switch in the  (Run) position.

If it comes on while engine is running:

