

Items	Frequency*1									Regular Replace	Refer to page	
	× 1,000 mi	0.6	4	8	12	16	20	24				
	× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4				
Fuel Line	⚡			I		I		I			-	
Throttle Operation	⚡			I		I		I			95	
Air Cleaner*2					R			R			80	
Crankcase Breather*3			C	C		C	C	C	C		96	
Spark Plug		Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R										73
Valve Clearance	⚡					I					-	
Engine Oil		R		R		R		R		1 Year	78	
Engine Oil Filter		R				R					78	
Engine Idle Speed	⚡			I		I		I			-	
Radiator Coolant*5				I		I		I		3 Years	82	
Cooling System	⚡			I		I		I			-	
Secondary Air Supply System	⚡					I					-	
Evaporative Emission Control System*4	⚡					I					-	

Maintenance Level

- ⚡ : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (▶ P. 133).
- ⚡ : Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R : Replace
- L : Lubricate
- C : Clean