

Check the following items at regular intervals:

- Oil level is between the upper and lower level marks. ➤ P. 69
- Brake fluid level is
Front: above the LOWER level mark. ➤ P. 77
Rear: between the UPPER and LOWER level marks. ➤ P. 77
- Engine coolant level is between the UPPER and LOWER level marks. ➤ P. 75
- Side stand functions properly. ➤ P. 80