

Available driving distance (only reserve fuel mode)

When the 1st (E) segment of the fuel gauge flashes, the estimated available driving distance is indicated.

Display range: 99 to 0 mile (km)

- Above 99 mile (km): "99" is displayed
- When the amount of remaining fuel is below 0.2 gal (1.0 L), "— —" is displayed.
- When the battery reconnects during reserve fuel mode, "— —" is displayed.

The indicated available driving distance is calculated based on the driving conditions, and the indicated figure may not always be the actual allowable distance. When the fuel gauge is near to E or when E segment blinks, fill fuel promptly.

When "— —" is displayed except for the above-mentioned cases, go to your dealer for service.

Amount of remaining fuel (only reserve fuel mode)

When the 1st (E) segment of the fuel gauge flashes, the estimated amount of remaining fuel can be selected.

Display range: 0.8 to 0.2 gal (gallon) or 3.4 to 1.0 L (liters)

- Below 0.2 gal (1.0 L): "∴—" is displayed
- When the battery reconnects during reserve fuel mode, "∴—" is displayed.

The amount of remaining fuel is calculated from the driving conditions.

The indicated amount of remaining fuel may be different from the actual amount. When the fuel gauge is near to E or when E segment blinks, fill fuel promptly.

When "∴—" is displayed except for the above-mentioned cases, go to your dealer for service.