

Instruments *(Continued)*

5 Changing the fuel mileage meter unit:

- a Press the **3** (up) button or the **4** (down) button to select "L/100km" or "km/L".



- b Press the **SET** button. The fuel mileage meter unit is set, and the display moves to the setting of subtraction trip.

6 Setting the subtraction trip:

- a The preset figure is displayed and the third digit will be flashing.



- b To set the third digit, press the **3** (up) button or the **4** (down) button until the desired figure appears.
- u Press and hold the **3** (up) button or the **4** (down) button to advance the figure fast.



- Press the **3** (up) button
- ⇨ Press the **4** (down) button

- b Press the **SET** button. The second digit starts flashing.



- d Repeat the steps **b** and **b** for setting of the second and first digits.