

Switches

CRF1000A

Torque Control switch




Torque Control level setting and
Torque Control on/off. (P53)

Horn button

Turn signal switch

Pressing the switch turns the turn signal off.

Headlight dimmer/Passing light control switch

-  : High beam
-  : Low beam
-  **PASS** : Flashes the high beam headlight.

