

Ignition Switch

Switches the electrical system on/off, locks the steering.

- u Key can be removed when in the OFF or LOCK position.

Steering Lock: (P52)



Rear ABS switch


Switches the ABS function on the rear wheel on/off. (P55)



G switch

Switches the G switch on/off. (P56)

Engine stop switch/ Start button

Should normally remain in the  (Run) position.

- u In an emergency, switch to the  (Off) position to stop the engine.

A/M Switch

To shift between the AT MODE and MT MODE. (P66)



Hazard switch

Switchable when the ignition switch is on. Can be turned to off regardless of the ignition switch position.

- u The signals continue flashing with the ignition switch in OFF or LOCK after the hazard switch is on.