



Tachometer

NOTICE

Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

Tachometer red zone

(excessive engine rpm range)

Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing: approximately 1.11 US gal (4.2 L)

If the fuel gauge indicator flashes in a repeat pattern or turns off: ➔ P.156



Speedometer