

Instruments *(Continued)*

Coolant temperature gauge

When the coolant is over the specified temperature, the 6th (H) segment flashes and high coolant temperature indicator lamps. ➔P.151

If the coolant temperature gauge indicator flashes:

➔P.151



D indicator

CRF1000D/D II

Comes on when the D mode is selected in the AT MODE. ➔P.76

S indicator

CRF1000D/D II

Comes on when the S mode is selected in the AT MODE. ➔P.76

G indicator

CRF1000D/D II

Comes on when the G switch is turned on. ➔P.56

