

## Instruments *(Continued)*

### Average speed

Displays the average speed since the selected tripmeter was reset.

The average speed will be calculated based on value displayed on the tripmeter (A or B) selected. Also, the average speed for tripmeter A will be displayed when the odometer is selected.

- Initial display: “---” is displayed.

When “---” is displayed while riding, go to your dealer for service.

**To reset the average speed:**  **P.29**

### Subtraction trip

Distance travelled is subtracted from a preset figure.

#### AC, II AC, IV AC type

Setting range: 000.0 to 999.0 mile or km

- u When the unit changed to “km” after setting the subtraction trip to “621 mile” or more with the unit set to “mile”, “999.1 km” or more are displayed.

When the subtraction value reaches “-1609.0” mile (“-1000.0” km) while riding, the number will flash.

- u If the display is switched to another indication when the subtraction value has reached “-1609.0” mile (“-1000.0” km) and the number is flashing, the number will no longer flash but just stay on when the display is returned to the subtraction trip.