

## Instruments *(Continued)*

### Available driving distance

Displays the estimated distance you can travel on the remaining fuel.

#### AC, II AC, IV AC type

Display range: 999 to 3 mile (999 to 5 km)

- Above 999 km (mile): "999" is displayed
- Initial display: "---" is displayed.
- When the available driving distance is below 3 mile (5 km) or the amount of remaining fuel is below 0.2 gal (1.0 L), "---" is displayed.

#### CM, IV CM type

Display range: 999 to 5 km (999 to 3 mile)

- Above 999 km (mile): "999" is displayed
- Initial display: "---" is displayed.
- When the available driving distance is below 5 km (3 mile) or the amount of remaining fuel is below 1.0 L (0.2 gal), "---" is displayed.

The indicated available driving distance is calculated based on the driving conditions, and the indicated figure may not always be the actual allowable distance.

When "---" is displayed except for the above-mentioned cases, go to your dealer for service.