


### 3 Backlight brightness adjustment:

You can adjust the brightness to one of five levels.

- Press the **SEL** **▲** (up) button or the **SEL** **▼** (down) button. The brightness is switched.

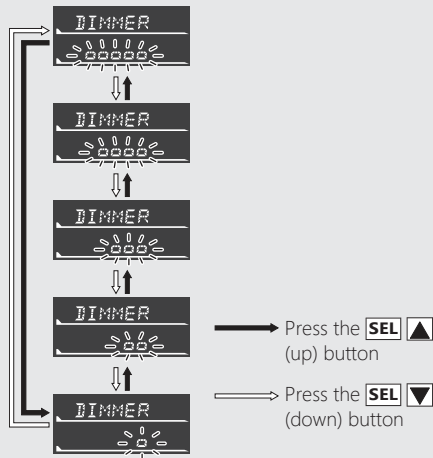

- Press the **MODE** button. The backlight is set, and then the display moves to the changing of the speed and mileage unit.