


Instruments *(Continued)*

4 Changing the speed and mileage unit:

 
- 1 Press the **SEL** ▲ (up) button or the **SEL** ▼ (down) button to select either "mph" & "mile" or "km/h" & "km".

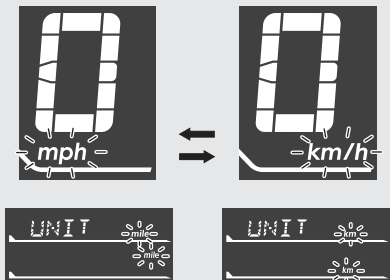

- 2 Press the **MODE** button. The speed and mileage unit is set, and then the display moves to the changing of the temperature gauge unit.

5 Changing the temperature gauge unit:

- 1 Press the **SEL** ▲ (up) button or the **SEL** ▼ (down) button to select "°F" (Fahrenheit) or "°C" (Centigrade).



- 2 Press the **MODE** button. The temperature gauge unit is set, and then the display moves to the changing of the fuel mileage meter unit.