

## Honda selectable torque control *(Continued)*

### Torque Control on and off

Torque Control can be turned on and off by pressing and holding the Torque Control switch.

Each time the ignition switch is turned to the ON position, the Torque Control is automatically turned to on.

### Torque Control switch

