

Initial setting

Riding modes	P value	EB value	Torque Control level
TOUR	1	2	6
URBAN	2	2	6
GRAVEL	3	3	6
USER	1*1	2*1	6*1, 2

Notes:

*1 : Value can be changed.

*2 : If level 0 (off) is selected, the value will change to level 1 the next time the ignition is turned on.

P value (Engine output level)

P value has three setting levels.

Available setting range: 1 to 3

- u Level 1 has the most power.
- u Level 3 has the least power.

EB value (Engine brake level)

EB value has three setting levels.

Available setting range: 1 to 3

- u Level 1 has the strongest engine braking effect.
- u Level 3 has the weakest engine braking effect.