

## Changing between Neutral and AT MODE/MT MODE

### Changing from Neutral (N) to AT MODE

Press the **D-S** side of the N-D switch (a ).  
The D mode indicator comes on, "1" is shown in the gear position indicator and first gear is selected.

### Changing from AT or MT MODE to Neutral

Press N on the N-D switch (b ).

### Changing between D mode and S mode while in AT MODE

Press the **D-S** side of the N-D switch. The S or D mode indicator comes on (c , d ).

## Changing between AT MODE and MT MODE

Press the AT/MT switch (e ).

The S or D indicator goes out while MT MODE is selected (f ).

