

Removal


1. Remove the bolts and washers.
2. Remove the collar.
3. Remove the skid plate by releasing its grommet from the prong.

Installation

1. Install the skid plate in the reverse order of removal.
2. Install the collar.
3. Install the washers onto the bolts. Tighten the bolts.

Torque: 19 lbf-ft (26 N·m, 2.7 kgf-m).

Tool Box

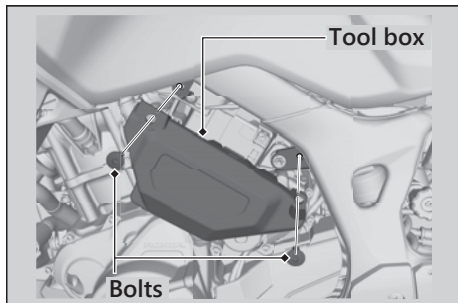

Removal

1. Remove the bolts using the hex wrench provided on the underside of the front seat. 2 P. 83
2. Remove the tool box.

Installation

Install the parts in the reverse order of removal.