


FI Fuse & ABS FSR Fuse & DCT Main Fuse

CRF1000D/D II

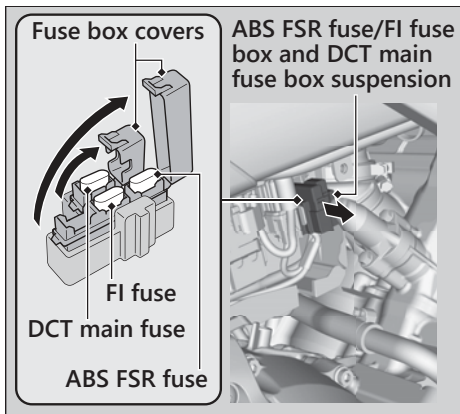

1. Remove the battery box cover. 2 P. 109
2. Pull the ABS FSR fuse/FI fuse box and DCT main fuse box suspension out.
3. Open the fuse box covers.
4. Pull the ABS FSR fuse, FI fuse and DCT main fuse out with the fuse puller in the tool kit one by one check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
 - u Spare FI fuse is provided in the fuse box under the front seat.
 - u Spare ABS FSR fuse and spare DCT main fuse are provided in the starter magnetic switch.
5. Reinstall parts in the reverse order of removal.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.