

Parts Location.....	18
Passing Light Control Switch.....	50, 52
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL)....	46, 152
Position Light	168
Protective Apparel.....	10

R

Rear ABS (Anti-lock Brake System) OFF	
Indicator.....	49
Rear ABS Switch.....	51, 53
Rear Suspension	146
Rear Turn Signal	169
Recommended	
Coolant.....	103
Fuel.....	80
Oil.....	100
Refueling.....	80
Removal	
Battery	108
Battery Box Cover.....	109
Clip	110
Front Seat	111
Right Side Lid.....	113

Skid Plate	114
Tool Box.....	115
Reporting Safety Defects.....	196
Riding Mode	65
Riding Precautions	11

S

S Indicator	24
S Mode.....	24, 76
Safety Guidelines	3
Safety Labels	8
Safety Precautions.....	10
Shifting Gears	72
Side Stand	129
Side Stand Ignition Cut-off System	129
Spark Arrester.....	116
Specifications.....	197
Speedometer	23
Start Button.....	51, 53, 70, 71
Starting the Engine	70
Steering Lock.....	54
Stopping Engine	177