


| Main Fuse & FI Fuse

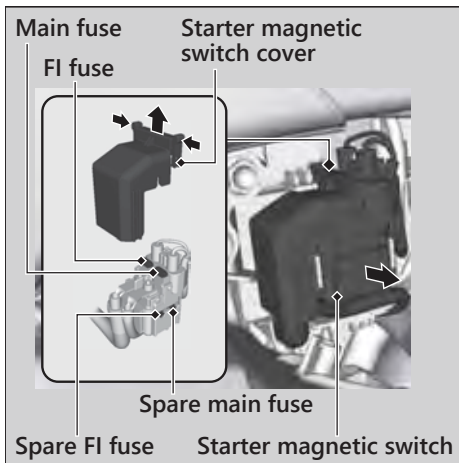

1. Remove the battery box cover. 2 P. 97
2. Pull the starter magnetic switch out.
3. Remove the starter magnetic switch cover.
4. Pull the main fuse and FI fuse out with the fuse puller in the tool kit one by one check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
 - u Spare main fuse is provided in the starter magnetic switch.
5. Reinstall parts in the reverse order of removal.