

- ▶ To reset the subtraction trip to the set value, press and hold the **MODE** button while subtraction trip is displayed.



CM, II CM, III CM, IV CM type

Setting range: 000.0 to 999.0 km or mile

- ▶ When the unit changed to "km" after setting the subtraction trip to "621 mile" or more with the unit set to "mile", "999.1 km" or more are displayed.

When the subtraction value reaches "-1609.0" km ("-1000.0" mile) while riding, the number will flash.

- ▶ If the display is switched to another indication when the subtraction value has reached "-1609.0" km ("-1000.0" mile) and the number is flashing, the number will no

longer flash but just stay on when the display is returned to the subtraction trip.

- ▶ To reset the subtraction trip to the set value, press and hold the **MODE** button while subtraction trip is displayed.



When "----.-" is displayed while riding, go to your dealer for service.

To set the subtraction trip: ➔ **P.44**